





ISTRUZIONI DI MONTAGGIO

ASSEMBLY INSTRUCTIONS






RSC50 2.0 NPG/1-0,7MT
RSC50 2.0 NPA/1-0,7MT
RSC50 2.0 PX/1-0,7MT
RSC50 2.0 PW/1-0,7MT

RSC50 2.0 NPG/2-1,5MT
RSC50 2.0 NPA/2-1,5MT
RSC50 2.0 PX/2-1,5MT
RSC50 2.0 PW/2-1,5MT


RSC50 2.0 NPG/3-2,2MT
RSC50 2.0 NPA/3-2,2MT
RSC50 2.0 PX/3-2,2MT
RSC50 2.0 PW/3-2,2MT



RSC50 2.0 MS-2C



RSC50 2.0 MS-AVV

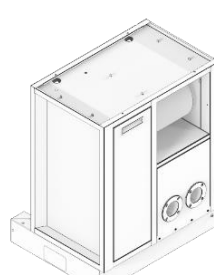


RSC50 2.0 MS-2AVV




RSC50 2.0 M4




RSC50 2.0 M5

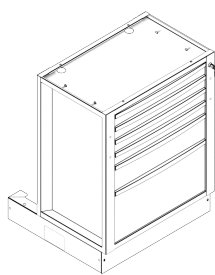


RSC50 2.0 M6

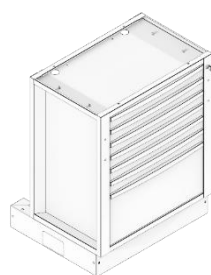


RSC50 2.0 M7

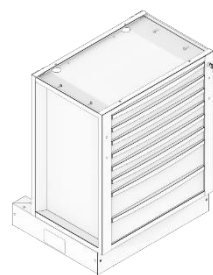

RSC50 2.0 M8

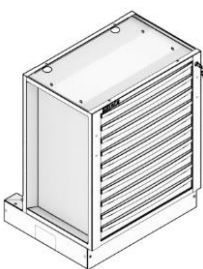


RSC50 2.0 M10

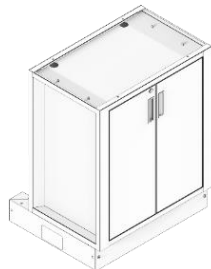

RSC50 2.0 MA



RSC50 2.0 CS

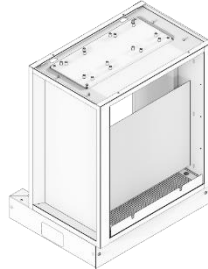


RSC50 2.0 MDO




RSC50 2.0 ML



RSC50 2.0 C5

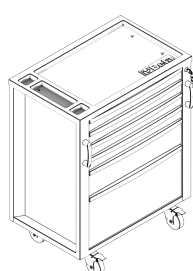


RSC50 2.0 C6

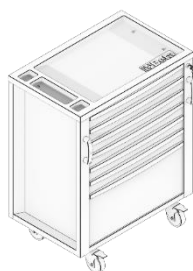

RSC50 2.0 C7




RSC50 2.0 C8

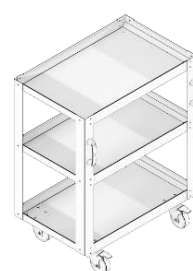


RSC50 2.0 T3


STEP A

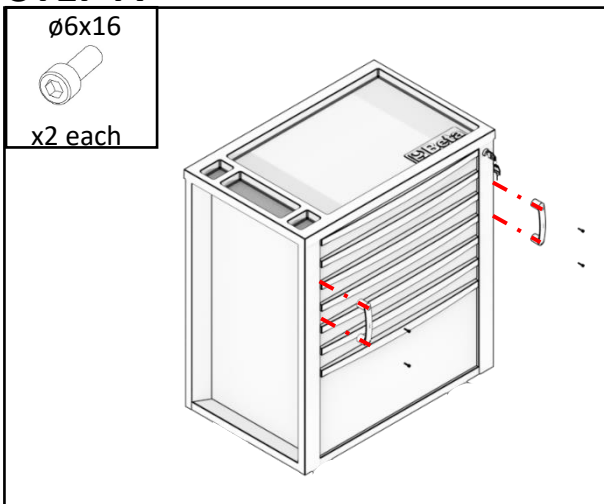


STEP B

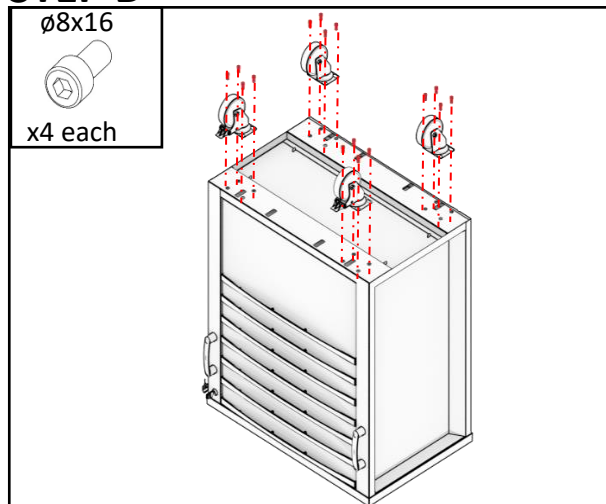


STEP C

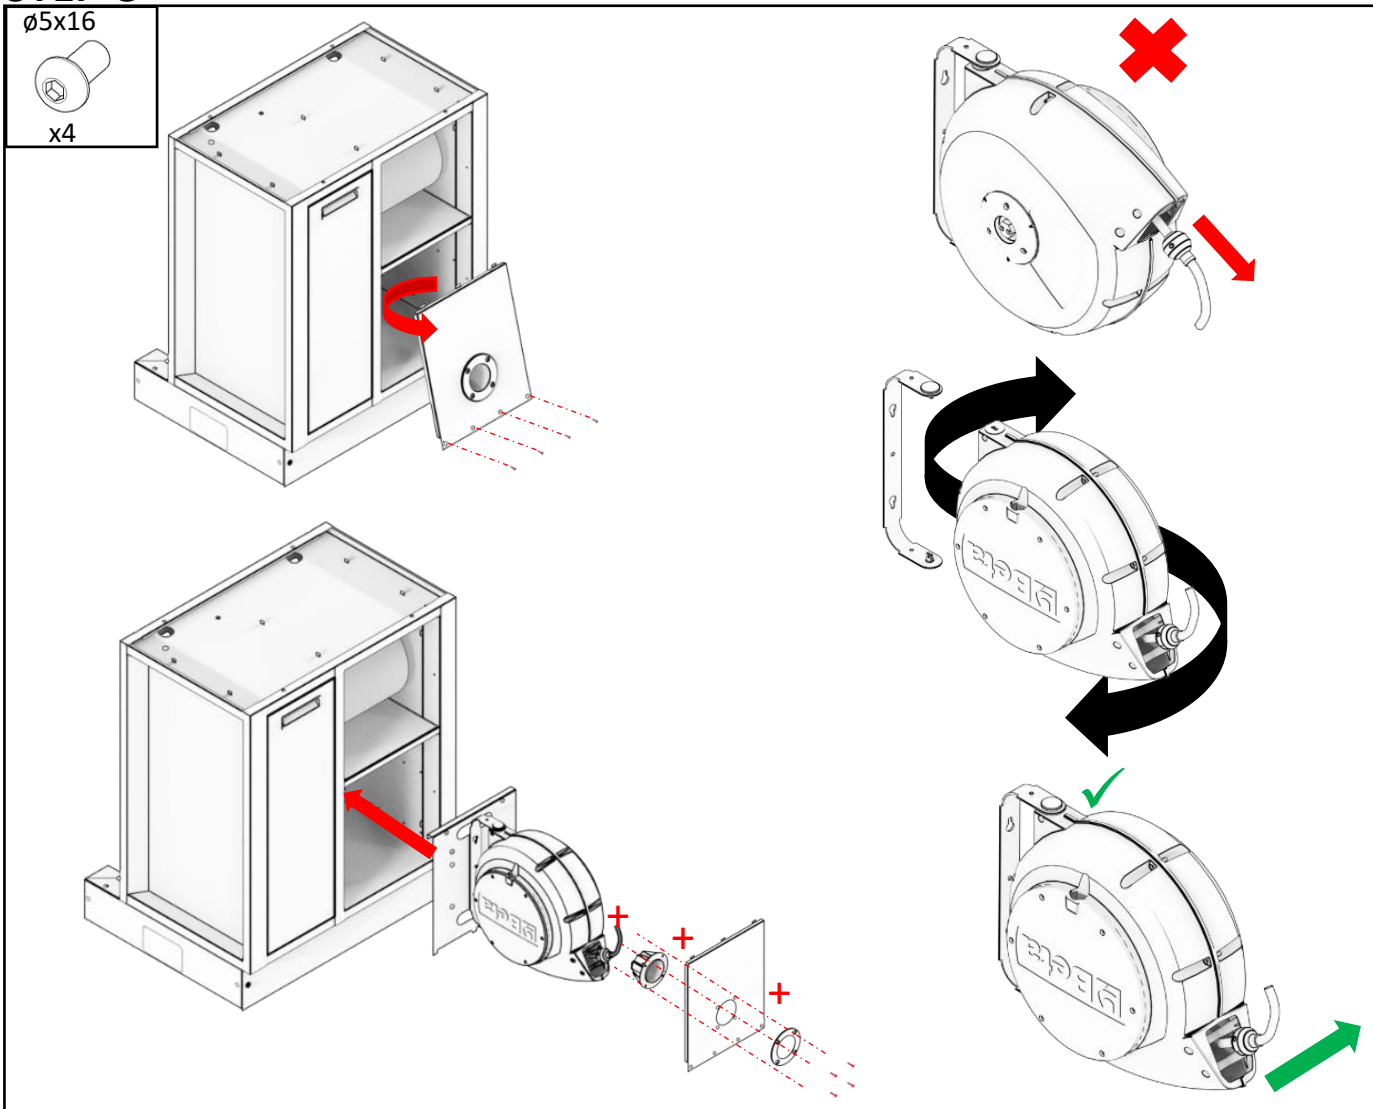


STEP 1

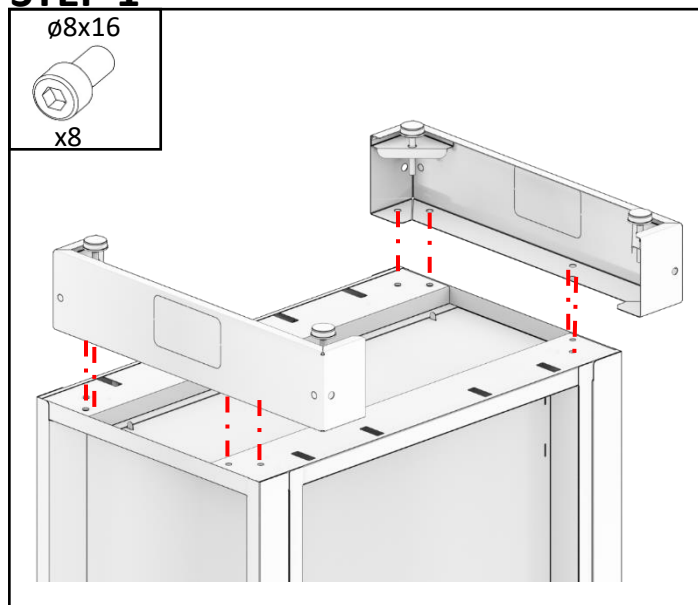


STEP 2

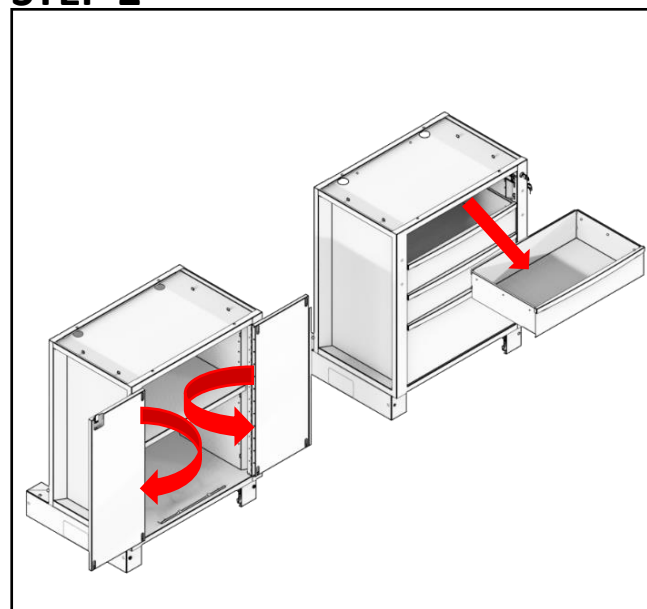


STEP 3

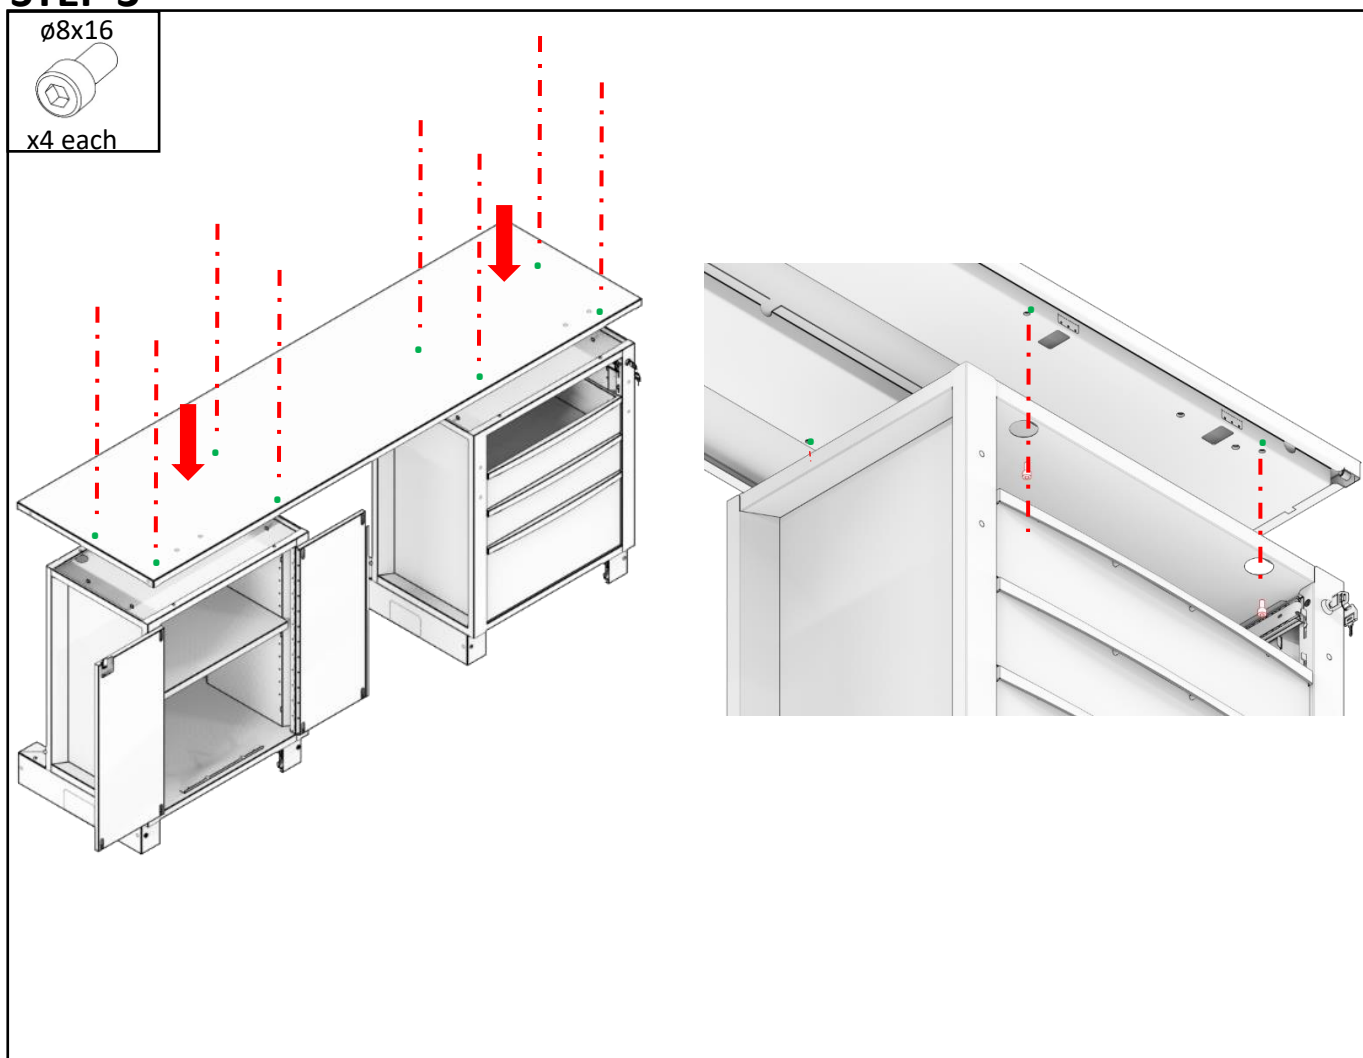


STEP 4

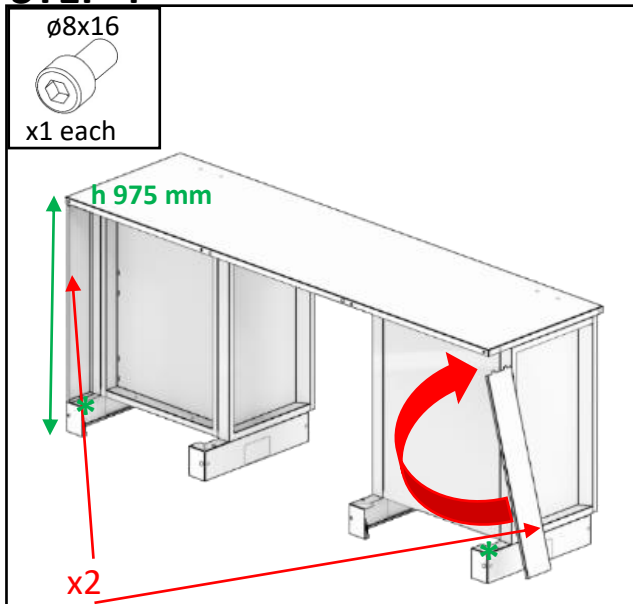



STEP 5

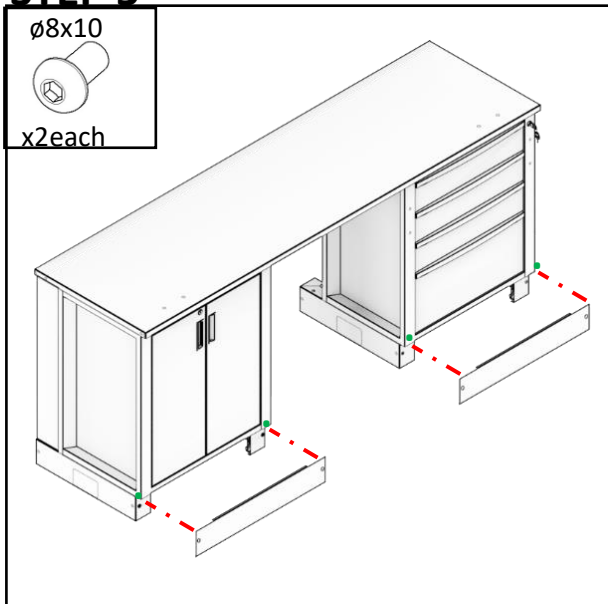


STEP 6

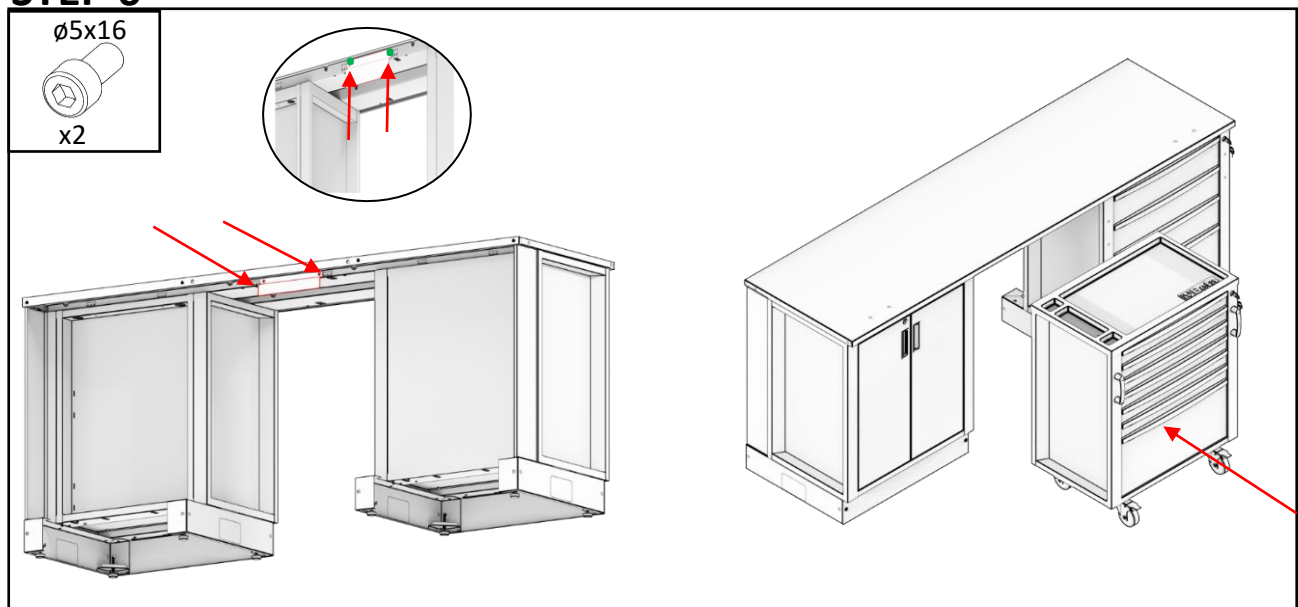


h 2 mt

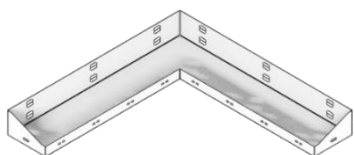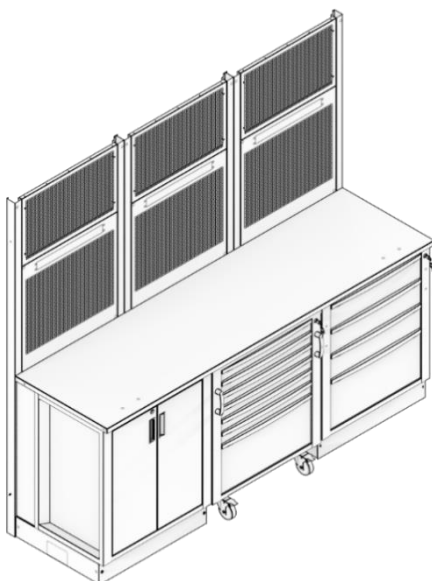


5000 RSC50 2.0/MPA140
Optional

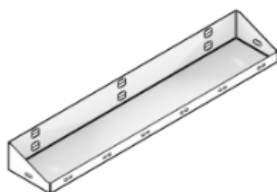


5000 RSC50 2.0/MP
Optional

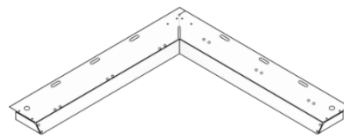


5000 RSC50 2.0/CAL
Optional

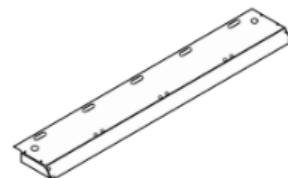


5000 RSC50 2.0/CLL
Optional

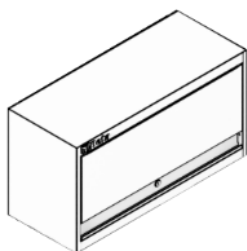

RSC50 2.0 PM

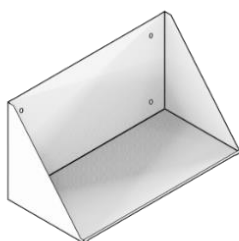


RSC50 2.0 MTP
Optional

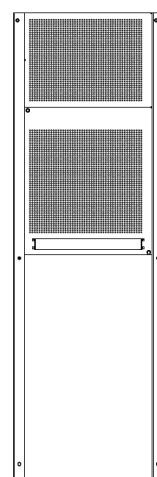


RSC50 2.0 KPF


STEP 7

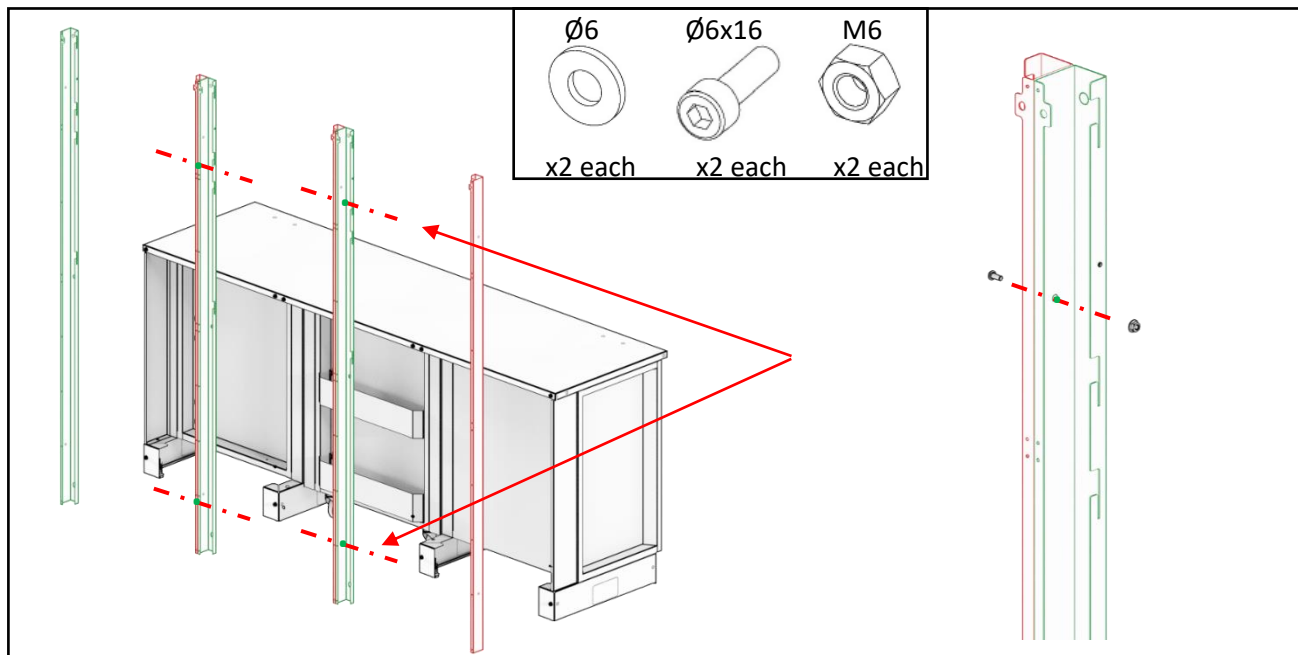


STEP 8

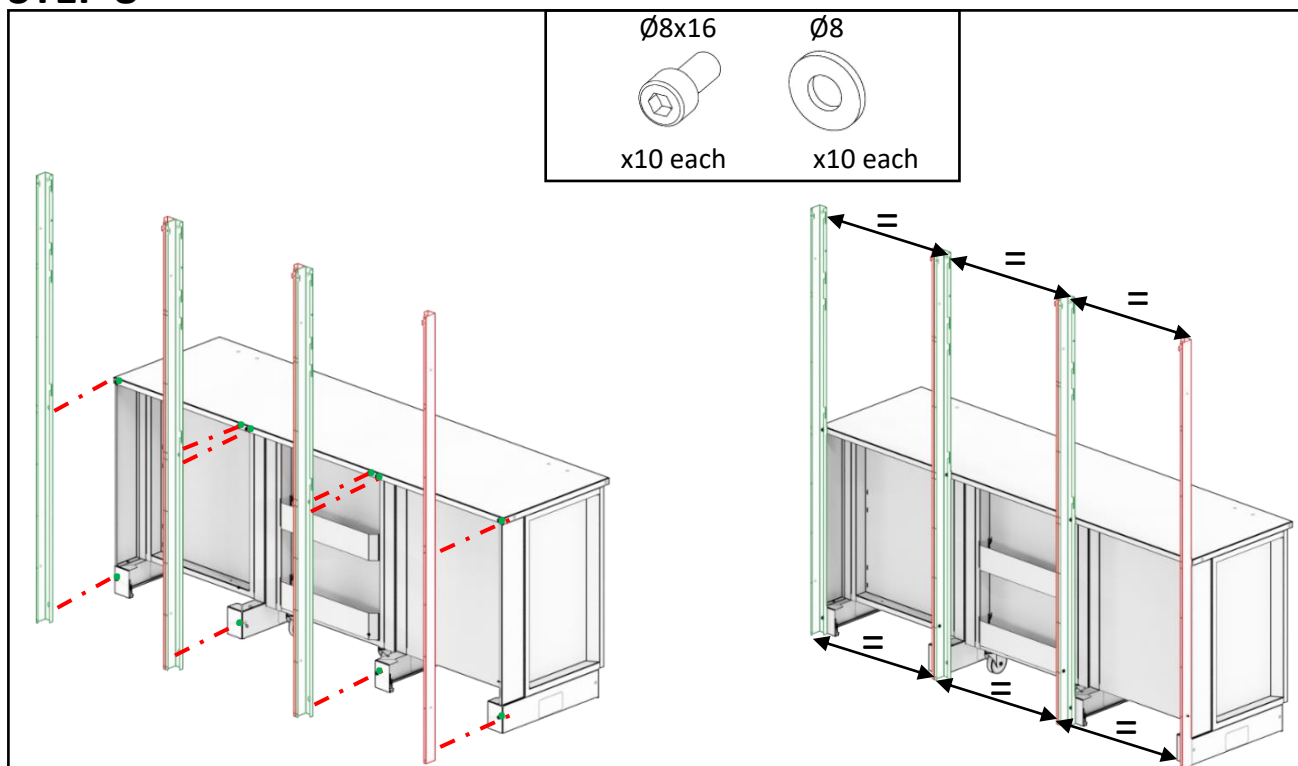

STEP 9

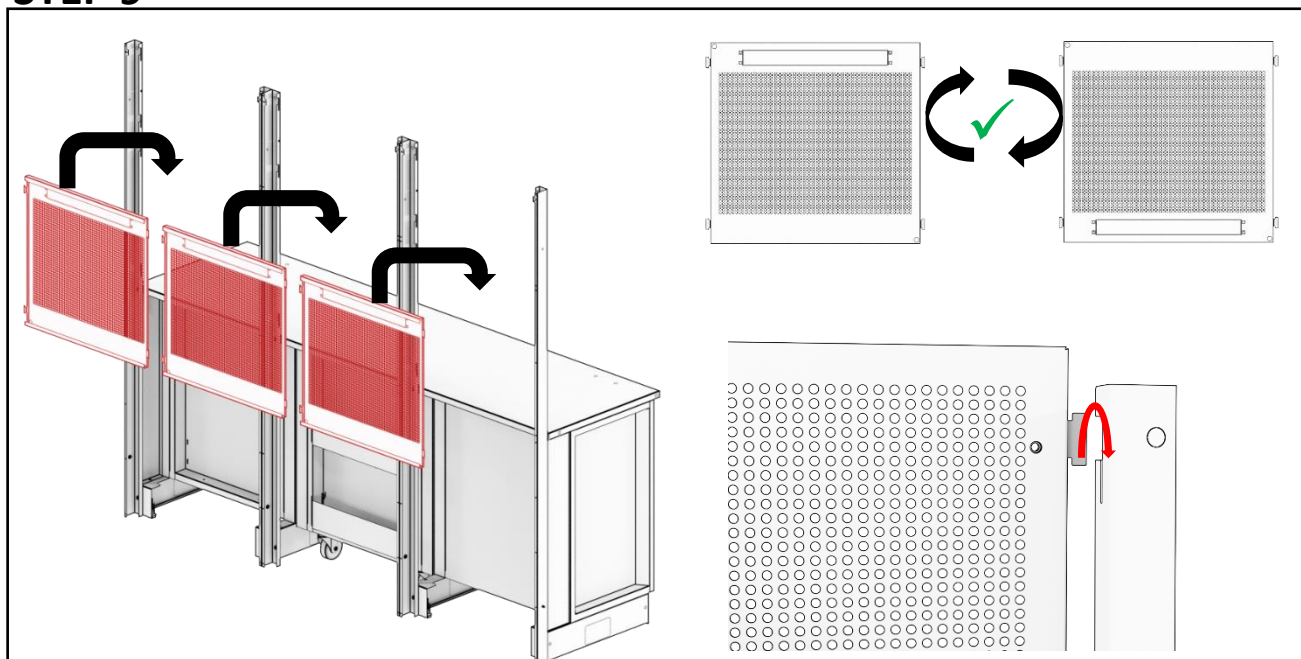

STEP 10

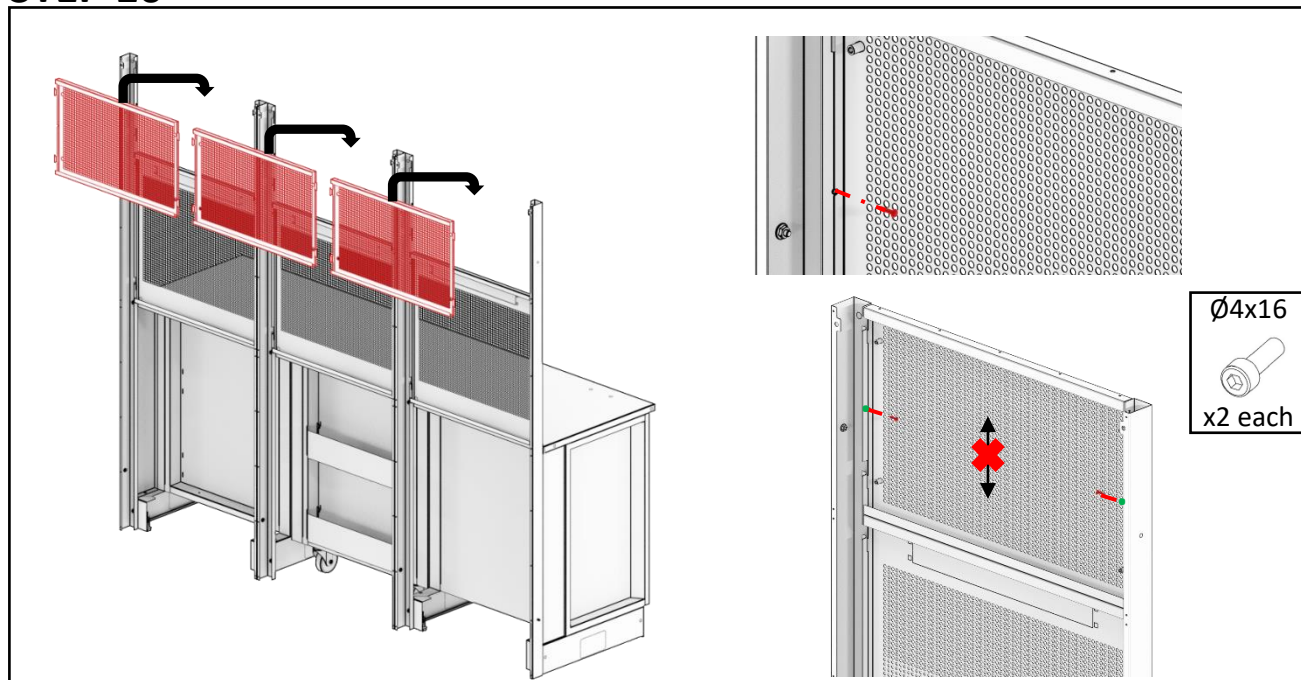


STEP 11

M6x16



x4

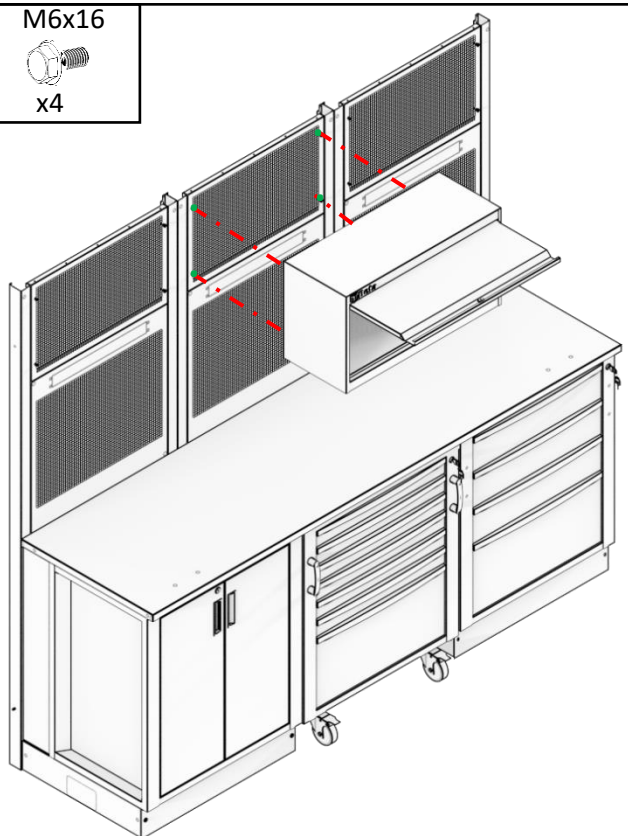


STEP 12

M6x16



x4

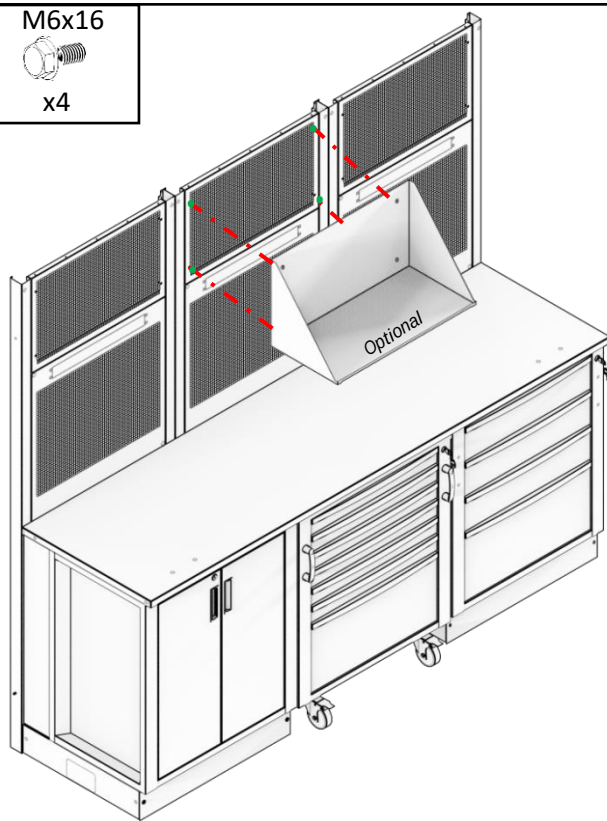


STEP 13





Ø6x13




x3

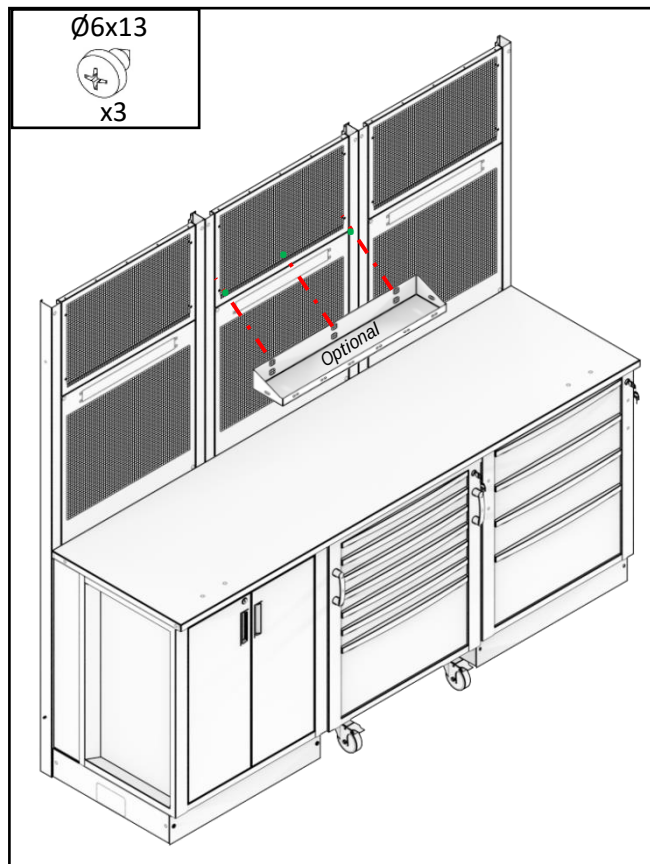


STEP 14

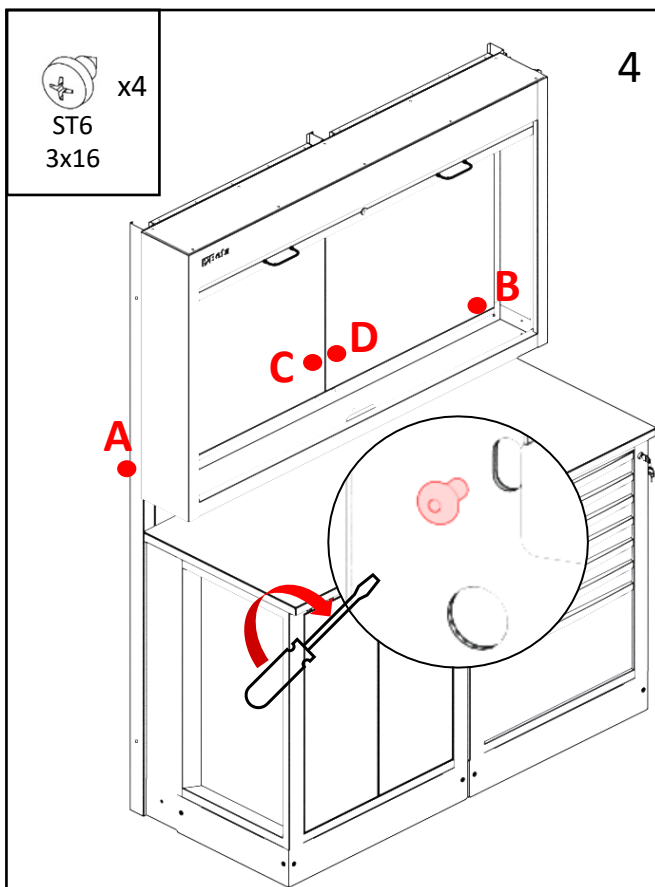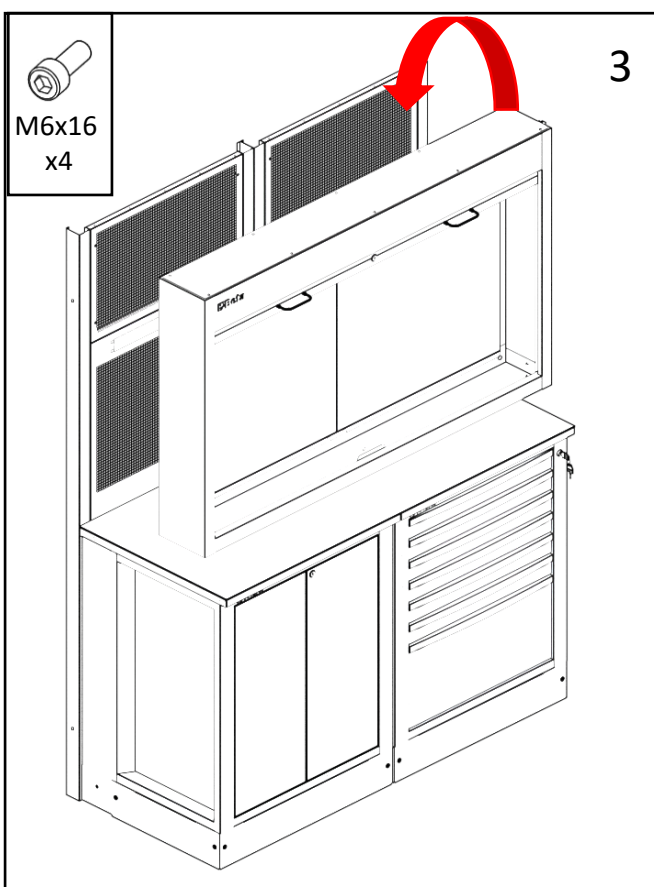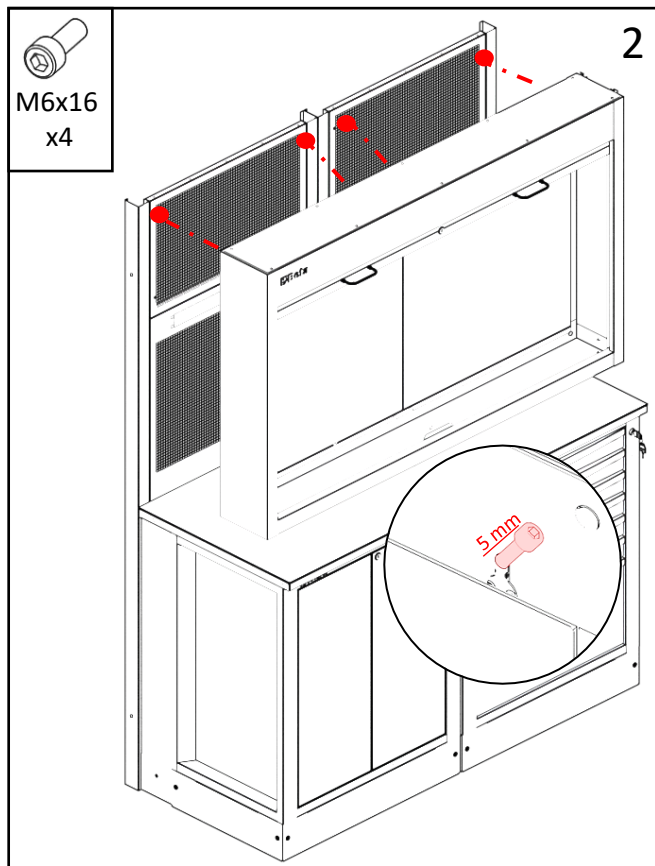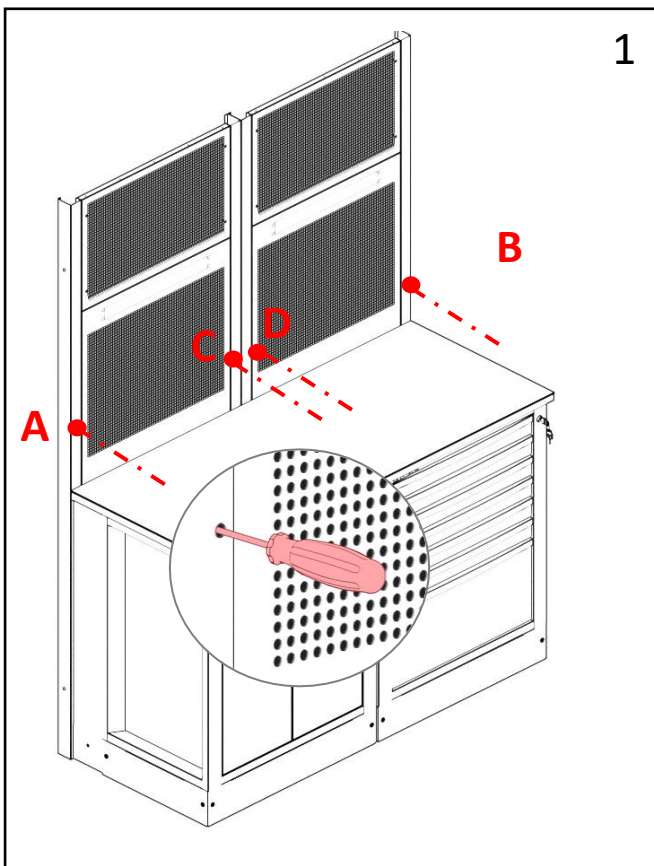

STEP 15

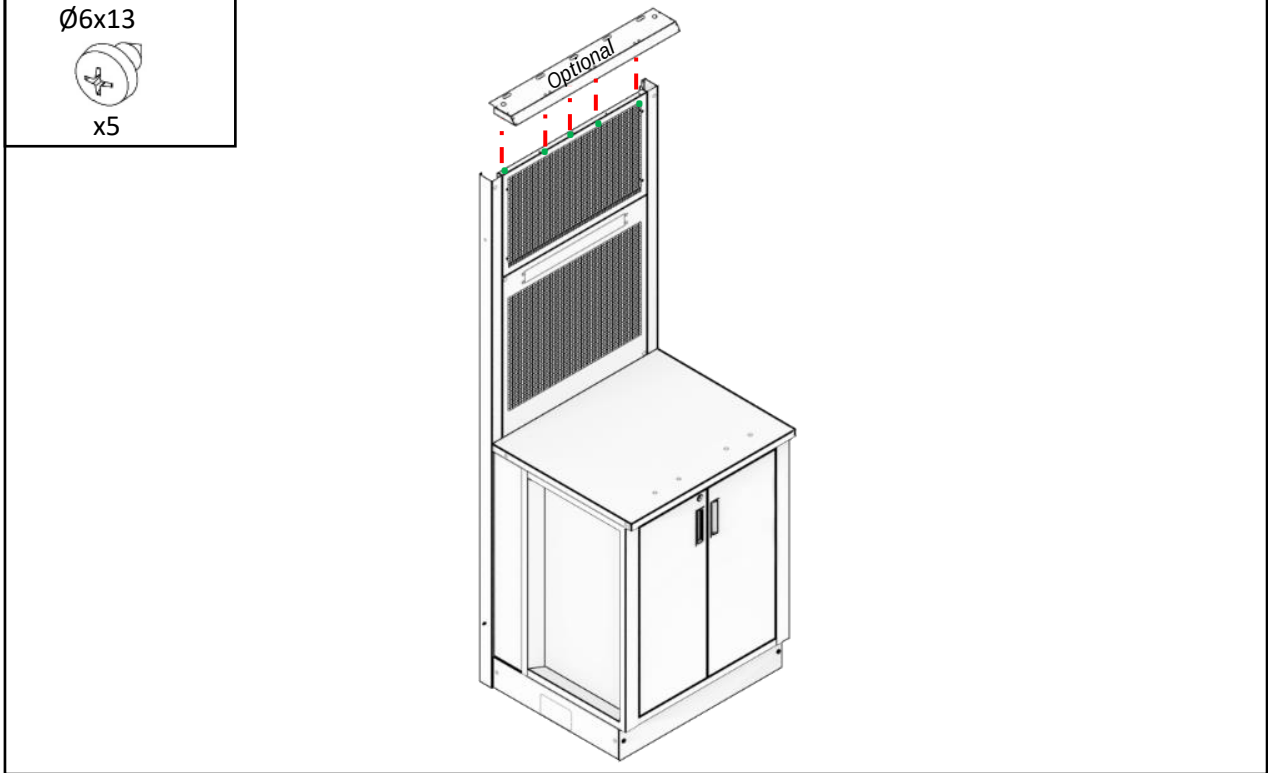

STEP 16

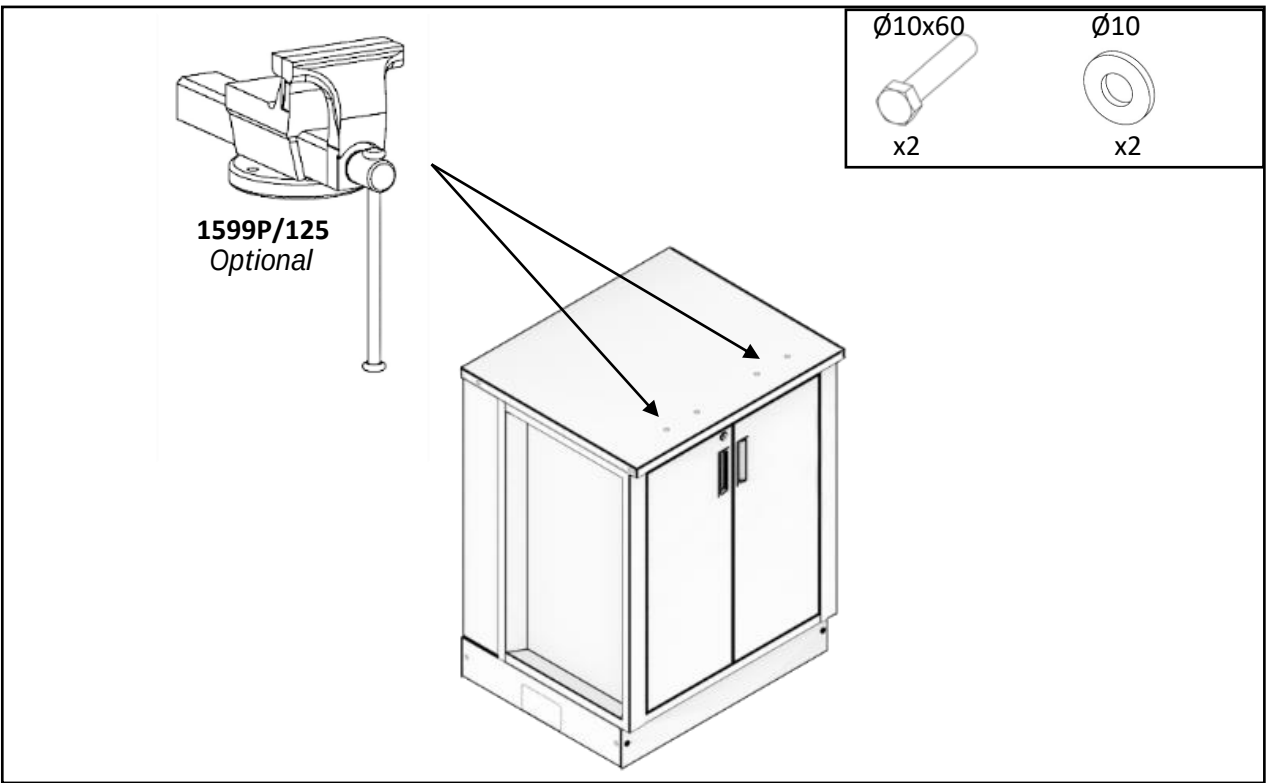

ISTRUZIONI PER IL MONTAGGIO DELLA MORSA SU PIANI DI LAVORO IN LEGNO E ACCIAIO INOX
VICE INSTALLATION INSTRUCTION FOR WOOD AND STAINLESS STEEL WORKTOPS

